


 





 


 

 

 

 

 

 



 

 




 





 









 

 
 
 


 
 
 
 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV/RAD		TV/R
	Bollywood		Format
	[↔]/Ratio		3D
	Away/Mosquito		Media
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List





 

 
 




 
 
 

 
 


 

 

 

 

Originalfernbedienung Ersatzfernbedienung

	Info		Info
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	FAV		Pre Ch
	Guide		Guide
	P+		Ch +
	P-		Ch -
	Back		Back
	Exit		Exit
	Home		Smart
	*		Menu
	Q.Menu		D. Menu
	Text		Text
	T.OPT		Options
	Up		Up
	Down		Down





**Originalfernbedienung Ersatzfernbedienung**

	Right		Right
	Left		Left
	OK		Ok
	AD/*		Subt
	Rec		Rec
	Stop/Live TV		Stop
	<<		<<
	Play		Play
	Pause		Pause
	>>		>>
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

**Originalfernbedienung Ersatzfernbedienung**