



**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Energy Saving		3D
	Input		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Sleep		Sleep
	Still		Pre Ch
	Vol+		Vol +
	Vol-		Vol -

**Originalfernbedienung Ersatzfernbedienung**

	Blank		Subt
	Ratio		Smart
	Mute		Mute
	Page Up		Ch +
	Page Down		Ch -
	Settings		Options
	Picture		Format
	Q.Menu		D. Menu
	Back		Back
	AV Mode		TV/R
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Stop		Stop





**Originalfernbedienung Ersatzfernbedienung**

	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	Simplink		Media
	Key's Up		>>
	Key's Down		<<<
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

**Originalfernbedienung Ersatzfernbedienung**


