




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	D/A Input		Smart
	Tv/Radio		TV/R
	Input		AV
	Bright+		Shift + Right
	Bright-		Shift + Left
	Simplink		Media
	Text		Text
	Ratio		Format
	I/II		Dual
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Stop		Stop
	Play		Play
	Pause		Pause

Originalfernbedienung Ersatzfernbedienung

	Rec		Rec
	I<<		I<<
	<<		<<
	>>		>>
	>>I		>>I
	Exit		Exit
	Back		Back
	Menu		Menu
	Info		Info
	Guide		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -



