


 


 
 
 
 
 
 
 

 
 




 

 





 


 

 




Originalfernbedienung Ersatzfernbedienung





 

 

 
 







 

 
	Power		Power
	Tv/Rad		TV/R
	Subtitle		Subt
	AD/PIP/*		Dual
	Tv/PC		Media
	Input		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List

Originalfernbedienung Ersatzfernbedienung

	Q.View		D. Menu
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	FAV		Pre Ch
	Guide		Guide
	P+		Ch +
	P-		Ch -
	Text		Text
	Info		Info
	T.Opt		Shift + Options
	Settings		Options
	Back		Back
	Exit		Exit
	Q.Menu		Menu
	Up		Up
	Down		Down





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Right	 Right		
 Left	 Left		
 OK	 Ok		
 Simplink	 Smart		
 Rec	 Rec		
 Stop/Line Tv	 Stop		
 <<<	 <<<		
 Play	 Play		
 Pause	 Pause		
 >>>	 >>>		
 Red	 Red		
 Green/Games	 Green		
 Yellow/Brightness	 Yellow		
 Blue/Brightness+	 Blue		

