




 

































 

 







**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Tv/Rad		TV/R
	Tv/PC		3D
	Subtitle		Subt
	*		Menu
	Sources		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/Quick Access/*		0
	List		List

**Originalfernbedienung    Ersatzfernbedienung**

	.../*		Format
	FAV		Pre Ch
	Guide		Guide
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	Text		Text
	Home		Smart
	T.Opt		Options
	Back		Back
	Exit		Exit
	AD/*/PIP/*		Dual
	Q.Menu/*		D. Menu
	Up		Up
	Down		Down



