

 



 





 







 

 

 

 

 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	EQ		Subtitle / EQ
	LG EQ		Audio / Lang I/II
	Open/Close		Eject / Surround
	Preset/Folder+		CH+ / Page+
	Function		Smart / List
	Vol+		Vol+
	Preset/Folder-		CH- / Page-
	Mute		Mute / Dimmer
	Vol-		Vol-
	Sleep		Sleep / Timer
	Repeat		Green / APP / Repeat
	Repeat		Up
	Info		Info / Angle
	<< / I<< / Tun-		<< / Tune-
	<< / I<< / Tun-		I<< / Preset-
	<< / I<< / Tun-		Left

Originalfernbedienung Ersatzfernbedienung

	Stop		Stop / Hold
	Stop		OK
	>> / >>I /		>> / Tune+
	>> / >>I /		>>I / Preset+
	>> / >>I /		Right
	Program/Memo		TV/Radio /
	Play/Pause		Play / Slow
	Play/Pause		Pause / Step / Freeze
	Play/Pause		Down
	Rec		Rec / Rec Mode
	Clock		Shift + Sleep / Timer
	Time		Menu / Home
	Set/RDS		D.Menu / Top
	PTY		Setup / OPT /

