




 

 

 
 
 

 
 
 


 


 

 




 




 







 








 



 

 
 

 
 
 










Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Mute		Mute
	TV		TV/R
	Input		AV
	I/II		Dual
	List		List
	Menu		Menu
	Q.View		Options
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	PR+		Ch +
	PR-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Stop		Stop
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	SSM		Guide
	PSM		Pre Ch
	Sleep		Sleep
	[≡]/Text		Text
	*		Smart
	Blue		Blue



