



 
 
 
 
 
 
 
 

 
 
 
 

 
 



 




 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Marker		Smart
	Open/Close		Eject
	Search		TV/R
	Audio		Dual
	Subtitle		Subt
	Angle		Red
	Random		Media
	Program		Sleep
	Clear		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	I<<		I<<
	Play		Play
	>>I		>>I
	Zoom		Shift + Eject
	Stop		Stop
	Pause/Step		Pause
	Display		Info
	<I Slow		<<
	Slow I>		>>
	Select/Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Menu		Menu
	Title		List
	Setup		Options
	Return		Back
	Repeat		Text
	A-B		Format

