



 




















Originalfernbedienung	Ersatzfernbedienung
 Power	 Power
 EQ	 Dual
 >>/>>  / Tun+ / Right	 >>
 <</ << / Tun- / Left	  <<
 Preset/Folder Up	 Ch +
 Preset/Folder	 Ch -
 Function	 Menu
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Sleep	 Sleep
 Info	 Info
 Repeat/Random /	 Up
 Repeat/Random /	 Text
 Program/Memo	 D. Menu
 >>/>>  / Tun+ / Right	 Right
 <</ << / Tun- / Left	 Left

Originalfernbedienung	Ersatzfernbedienung
 >>/>>  / Tun+ / Right	 >>
 <</ << / Tun- / Left	 <<
 Stop / OK	 Stop
 Stop / OK	 Ok
 Play/Pause /	 Play
 Play/Pause /	 Down
 Play/Pause /	 Pause
 Rec	 Rec
 RDS	 Smart
 PTY	 Media

