







































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep / Timer
	Info		Info / Angle
	Function		Smart / List
	LG EQ		Audio / Lang I/II
	EQ		Subtitle / EQ
	Repeat /		Green / APP / Repeat
	Repeat /		Blue / Prime Video / Random
	I<< / Tun-		I<< / Preset-
	I<< / Tun-		<< / Tune-
	>> / Tun+		>> / Preset+
	>> / Tun+		>> / Tune+
	>> / Tun+		Right
	I<< / Tun-		Left
	Stop		Stop / Hold
	Stop		OK
	Repeat /		Up

Originalfernbedienung Ersatzfernbedienung

	Play/Pause		Play / Slow
	Play/Pause		Pause / Step / Freeze
	Play/Pause		Down
	Folder+ / Preset+		CH+ / Page+
	Folder- / Preset-		CH- / Page-
	Vol+		Vol+
	Vol-		Vol-
	Program /		Zoom / Size
	Mute		Mute / Dimmer
	RDS		AV / Input / RDS
	PTY		TV/Radio /
	Rec		Rec / Rec Mode



Random