 

 



 

 

 





 
 


























 



 

 

 

 








 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List/Guide		Guide / EPG / -/--
	List/Guide		Smart / List
	0/Quick Access		0
	Vol+		Vol+
	CH+		CH+ / Page+
	Mute		Mute / Dimmer
	Vol-		Vol-







Originalfernbedienung Ersatzfernbedienung

	CH-		CH- / Page-
	Home		Menu / Home
	Source		AV / Input / RDS
	Up		Up
	Left		Left
	Wheel Up		>> / Tune+
	Right		Right
	OK		OK
	Wheel Down		<< / Tune-
	Down		Down
	*		Setup / OPT /
	Back		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Netflix		Shift + Red / Netflix / Search





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
 prime video	 Shift + Blue / Prime
 Disney+	 Shift + Green / APP /
 Rakuten TV	 Shift + Yellow / YouTube /

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

