



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	e/Energy Saving		Shift + OK
	AV Mode		Text / Goto
	Input		AV / Input / RDS
	TV		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		Smart / List
	Q.View		Setup / OPT /

Originalfernbedienung Ersatzfernbedienung

	FAV/Mark		Fav / Marker / PC
	Ratio		Picture / Format
	Mute/Delete		Mute / Dimmer
	Vol+		Vol+
	Vol-		Vol-
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Menu		Menu / Home
	Netcast		Display / Media
	Q.Menu		D.Menu / Top
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Enter		OK
	Back		Back / Return
	Simplink		Zoom / Size





Originalfernbedienung Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

