

 

 

 



 

 



 

 

 


 

 








 







 

 

 



 







 

 

 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Clear		Exit / Cancel / Clear
	0		0
	Repeat	 + 	Shift + Green / APP / REPEAT
	I<<<		I<<< / Preset-
	<<<		<<< / Tune-
	>>>		>>> / Tune+

Originalfernbedienung Ersatzfernbedienung

	>>>I		>>>I / Preset+
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Home		Menu / Home
	Title/PopUp		Sound / Title
	Title/PopUp		Smart / List
	Menu/Info		Info / Angle
	Up		Up
	Right		Right
	Left		Left
	Enter		OK
	Down		Down
	Back		Back / Return
	Subtitle		Subtitle / EQ
	Menu Disc		D.Menu / Top
	Red		Red / Netflix / Search



