



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	TV	+ <b>1</b>	Shift + 1
	Caption		Subtitle / EQ
	AV Mode		Eject / Surround
	[ ]/Ratio		TV/Radio /
	Input		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0

**Originalfernbedienung    Ersatzfernbedienung**

	Flashbk		Text / Goto
	Vol+		Vol+
	FAV		Fav / Marker / PC
	CH/Page-		CH- / Page-
	CH/Page+		CH+ / Page+
	Vol-		Vol-
	Audio		Audio / Lang I/II
	Mute		Mute / Dimmer
	Picture		Picture / Format
	Info		Info / Angle
	Sound		Sound / Title
	Settings		Setup / OPT /
	Up		Up
	Q.Menu		D.Menu / Top
	Left		Left
	OK		OK
	Right		Right





Originalfernbedienung Ersatzfernbedienung

	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Simplink		Display / Media
	Sleep		Sleep / Timer
	Stop		Stop / Hold
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung


