











 
 



 

 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|-----------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | Preset Up |  | Shift + >>I / Preset+ |
|  | AUX |  | Shift + 7 |
|  | Volume+ |  | Vol+ |
|  | Preset Down |  | Shift + I<< / Preset- |
|  | Tuner/Band |  | Shift + 6 |
|  | Volume- |  | Vol- |
|  | Play |  | Play / Slow |
|  | Pause |  | Pause / Step / Freeze |
|  | Sleep |  | Sleep / Timer |
|  | I<<< |  | I<<< / Preset- |
|  | <<< |  | <<< / Tune- |
|  | Stop |  | Stop / Hold |
|  | >>>I |  | >>>I / Preset+ |
|  | >>> |  | >>> / Tune+ |
|  | Repeat |  | Green / APP / Repeat |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|----------------------------|
|  | Program/Memo |  | Shift + TV/Radio / Program |
|  | < Deck |  | Left |
|  | Deck > |  | Right |
|  | << Deck |  | Down |
|  | Deck >> |  | Up |
|  | Rec/Pause Deck |  | Rec / Rec Mode |
|  | Stop Deck |  | Shift + Stop / |
|  | EQ PATT. |  | Audio / Lang I/II |
|  | XDSS |  | Subtitle / EQ |
|  | SURR. |  | TV/Radio / |
|  | OAO |  | Zoom / Size |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |



