



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Play / Slow
	Vol+		Pause / Step / Freeze
	Function		Rec / Rec Mode
	Preset/Folder+		<< / Tune-
	Vol-		Stop / Hold
	Mute		Mute / Dimmer
	Preset/Folder-		>> / Tune+
	Program /		I<< / Preset-
	Sound Effect		>>I / Preset+
	Info		Sound / Title
	Sleep		Audio / Lang I/II
	Repeat (Menu) /		Eject / Surround
	Delete		Subtitle / EQ
	I<< / Tuning- / Left		Picture / Format
	Stop / Enter		Zoom / Size
	>>I / Tuning+ / Right		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

	Clock		D.Menu / Top
	Play / Pause /		TV/Radio /
	Timer		Setup / OPT /
	RDS / Set		Text / Goto
	USB Rec		AV / Input / RDS
	PTY		Menu / Home

