











 
























































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	Text		Text / Goto
	T.Opt		Setup / OPT /
	AD		Audio / Lang I/II
	*		Menu / Home
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0

Originalfernbedienung Ersatzfernbedienung

	...		Fav / Marker / PC
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	Search		Display / Media
	CH-		CH- / Page-
	TV		TV/Radio /
	Netflix		Shift + Red / Netflix /
	Home		Shift + Menu /
	prime video		Shift + Blue / Prime
	Disney+		Shift + Yellow / YouTube /
	Up		Up
	Movies		Shift + Green / APP /
	Left		Left
	OK		OK
	Right		Right





Originalfernbedienung    Ersatzfernbedienung

	Back		Back / Return
	Down		Down
	[→]		Exit / Cancel / Clear
	Guide		Guide / EPG / -/--
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung    Ersatzfernbedienung