 

 



 

 

 



 

 



 









 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject / Surround
	Function		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Clear		Exit / Cancel / Clear
	0		0
	Repeat		Shift + Green / APP /
	I<<<		I<<< / Preset-
	<<<		<<< / Tune-

Originalfernbedienung Ersatzfernbedienung

	>>>		>>> / Tune+
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Speaker Level		TV/Radio /
	Vol+		Vol+
	Optical / Tv Sound		Setup / OPT /
	Sound Effect		Sound / Title
	Vol-		Vol-
	Mute		Mute / Dimmer
	Home		Menu / Home
	3D Sound		Zoom / Size
	Info/Menu		Info / Angle
	Up/Preset+		Up
	Left/Tuning-		Left
	Enter		OK





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Right/Tuning+	Right	AV Input Tv	AV / Input / RDS
Down/Presets	Down	Volum- Tv	Shift + Vol-
Back	Back / Return	PR/CH- Tv	CH- / Page-
Title/Pop Up	Picture / Format		
Disc Menu	D.Menu / Top		
Red/RDS	Red / Netflix / Search		
Green/PTY	Green / APP / Repeat		
Yellow/PTY Search	Yellow / YouTube / Repeat		
Blue/Mono/Stereo	Blue / Prime Video / Random		
Subtitle	Subtitle / EQ		
Audio	Audio / Lang I/II		
Sleep	Sleep / Timer		
Music ID	Text / Goto		
*	Display / Media		
Power Tv	Shift + Power		
Volum+ Tv	Shift + Vol+		
PR/CH+ Tv	CH+ / Page+		

