
 
 
 
 




 


 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Tuner/Band		Shift + 6
	DVD		Shift + 2
	Portable		Shift + 3
	USB		Shift + 8
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EQ		Shift + Subtitle / EQ

Originalfernbedienung Ersatzfernbedienung

	XDSS plus		Smart / List
	Sound Mode		Sound / Title
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Return		Back / Return
	Setup		Setup / OPT /
	Up/Presets+		Up
	Display		Display / Media
	Left/Tun.-		Left
	Select/Enter		OK
	Right/Tun.+		Right
	Menu		Menu / Home
	Down/Presets-		Down
	Title		Shift + Sound / Title
	Prog. Memo		TV/Radio /
	<</Scan-		<< / Tune-
	>>/Scan+		>> / Tune+





Originalfernbedienung Ersatzfernbedienung

	Volume+		Vol+
	Repeat		Green / APP / Repeat
	<I/Slow-		CH- / Page-
	I>/Slow+		CH+ / Page+
	Repeat A/B		Yellow / YouTube / Repeat
	I<</Skip-		I<< / Preset-
	>>I/Skip+		>>I / Preset+
	Volume-		Vol-
	Stop/Mo/ST		Stop / Hold
	Pause/Step		Pause / Step / Freeze
	Play		Play / Slow
	Clear		Exit / Cancel / Clear
	Zoom		Zoom / Size
	Marker		Fav / Marker / PC
	Search		Red / Netflix / Search
	Sleep		Sleep / Timer
	RDS		AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung

	PTY		Picture / Format
--	-----	--	------------------

