 

 

 



 



 
 
 

 

 

 

 

 

 

 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject / Surround
	Power Tv		Shift + Power
	DVD		Shift + 2
	HDD		Shift + 7
	AV		AV / Input / RDS
	AV Tv		Smart / List
	1		1
	2		2
	3		3
	PR+ Tv		Shift + CH+ /
	4		4
	5		5
	6		6
	PR- Tv		Shift + CH- /
	7		7
	8		8

 




 

Originalfernbedienung Ersatzfernbedienung

	9		9
	Vol+ Tv		Vol+
	Tv/DVD		TV/Radio /
	0		0
	Mute Tv		Mute / Dimmer
	Vol- Tv		Vol-
	Display		Display / Media
	Text		Text / Goto
	Tv/Radio		Shift + TV/Radio / Program
	Rec		Rec / Rec Mode
	Zoom		Zoom / Size
	Repeat		Shift + Green / APP /
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Pause		Pause / Step / Freeze

 

 

 
 

 

 

 

 
 
 
 

 

 





Originalfernbedienung Ersatzfernbedienung

	Play		Play / Slow
	Stop		Stop / Hold
	Home	 + 	Shift + Menu /
	Up		Up
	PR+		CH+ / Page+
	Menu/List		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Guide		Guide / EPG / -/--
	PR-		CH- / Page-
	Down		Down
	Return		Back / Return
	Red/FAV		Red / Netflix / Search
	Green/Audio		Green / APP / Repeat
	Yellow/Subtitle		Yellow / YouTube / Repeat
	Blue/Timeshift		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

	Marker		Fav / Marker / PC
	Search	 + 	Shift + Red / Netflix /
	Dubbing		D.Menu / Top
	Clear		Exit / Cancel / Clear
	Tilte		Setup / OPT /
	Thumbnail		Sound / Title
	Random	 + 	Shift + Blue / Prime
	CHP.ADD		Picture / Format
	PIP		Audio / Lang I/II
	Showview		Subtitle / EQ

