 

 

 
 
 

 
 

 





 




 

 


 


 

 
 
 
 
 
 
 








 





 

 

 

 









**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	USB		SRC
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/10		0
	10+		-/-- / EPG
	Time		P/C / FAV
	SUB/MP3		MEDIA
	Angle		Red (A)
	Audio		Audio







 
 
 
 

 



 

 
 
**Originalfernbedienung    Ersatzfernbedienung**

	Mute		MUTE
	Menu		MENU
	Setup		VOD
	Up		UP
	Down		DOWN
	Left		LEFT
	Right		RIGHT
	Enter		OK
	Title		TV/R
	L/R		Green (B)
	<<		Rewind
	>>		Fast Forward
	Play		Play
	Pause		Pause
	PBC		Yellow (C)
	Stop		Stop
	I<<		First





Originalfernbedienung Ersatzfernbedienung

	>>I		Last
	Vol-		VOL -
	Vol+		VOL +
	V-Mode		V-FOR
	Repeat		TEXT
	N/P		Blue (D)
	Clear		EXIT
	Prog		OPT+
	A-B		Shift + VOD
	Zoom		WIDE
	Slow		CH +
	Random		CH -
	Return		BACK
	Display		INFO
	Step		Subt.

Originalfernbedienung Ersatzfernbedienung