 

 



 








 
 



 

 

 

 

 

 

 

 







 

 











 

 

 











Originalfernbedienung Ersatzfernbedienung

	PIP/[]		Picture / Format
	Web		Smart / List
	Back/End		Exit / Cancel / Clear
	DR+/Pop-Up-M		D.Menu / Top
	*/Zoom		Zoom / Size
	Blue/Marker		Blue / Prime Video / Random
	Red		Red / Netflix / Search
	Text/Disc-M		Text / Goto
	Info		Info / Angle
	Vol+		Vol+
	Vol-		Vol-
	P+		CH+ / Page+
	P-		CH- / Page-
	Up		Up
	Down		Down
	Right		Right
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	OK		OK
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	7		7
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Originalfernbedienung Ersatzfernbedienung







 

























	Power		Power
	8		8
	9		9
	0		0
	AV		AV / Input / RDS
	EPG		Guide / EPG / -/--
	Home	+	Shift + Menu /
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung











 

 



 

 



 

 













Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	DR+/Pop-Up-M		D.Menu / Top
	*/Zoom		Zoom / Size
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV / Input / RDS
	EPG		Guide / EPG / -/--
	Home		Menu / Home












 



 

 

 







Originalfernbedienung Ersatzfernbedienung

	PIP/[]		Picture / Format
	Text		Text / Goto
	Back		Back / Return
	Info		Info / Angle
	Vol+		Vol+
	P+		CH+ / Page+
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Vol-		Vol-
	Down		Down
	P-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue/Marker		Blue / Prime Video / Random







































Originalfernbedienung Ersatzfernbedienung

	DR+/Pop-Up-M		D.Menu / Top
	*/Zoom		Zoom / Size
	Blue/Marker		Blue / Prime Video / Random
	Back/End		Exit / Cancel / Clear
	PIP/[]		Picture / Format
	Red		Red / Netflix / Search
	Info		Info / Angle
	Vol+		Vol+
	Vol-		Vol-
	P+		CH+ / Page+
	P-		CH- / Page-
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Green		Green / APP / Repeat







 

 



 

Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow / YouTube / Repeat
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	7		7
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	Power		Power
	8		8





Originalfernbedienung Ersatzfernbedienung

 



 

 

 

























	9		9
	0		0
	AV		AV / Input / RDS
	EPG		Guide / EPG / -/--
	Home		Shift + Menu /
	Text		Text / Goto
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	DR+/Pop-Up-M		D.Menu / Top
	*/Zoom		Zoom / Size
	Web		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV / Input / RDS
	EPG		Guide / EPG / -/-





 











Originalfernbedienung Ersatzfernbedienung

	Home		Shift + Menu /
	PIP/[]		Picture / Format
	Text		Text / Goto
	Menu		Menu / Home
	Back/End		Exit / Cancel / Clear
	Info		Info / Angle
	Vol+		Vol+
	P+		CH+ / Page+
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Vol-		Vol-
	Down		Down
	P-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------

	Yellow		Yellow / YouTube / Repeat
	Blue/Marker		Blue / Prime Video / Random
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold

Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------

