



 

 



 
 
 
 

 
 


 



 

 

 





 

 








 



 

 

 



 







 


 




Originalfernbedienung Ersatzfernbedienung

 





 



 
 



 


	Power		Power
	Mute		MUTE
	TV		TV/R
	Radio		Shift + TV/R
	Rec-Menu / Clock		OPT+
	Title		VOD
	Audio		Audio
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	EPG		-/-- / EPG
	Assist		MEDIA
	PIP		V-FOR
	Text / Disc-M		TEXT
	Menu		MENU
	End		EXIT
	Info		INFO
	V+		VOL +
	V-		VOL -
	P+		CH +
	P-		CH -
	Up		UP
	Down		DOWN
	Right		RIGHT
	Left		LEFT
	OK		OK
	Red / C-Set		Red (A)





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Green / SV	 Green (B)		
 Yellow / Zoom	 Yellow (C)		
 Blue / Marker	 Blue (D)		
 <<	 Rewind		
 >>	 Fast Forward		
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 Rec	 Rec		

