



 






Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Info		Info / Angle
	Subtitle		Subtitle / EQ
	Mute		Mute / Dimmer
	Page+		CH+ / Page+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	Page-		CH- / Page-
	Stop		Stop / Hold
	>>		>> / Tune+
	Menu		Menu / Home
	Up/CH+		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	Vol-		Vol-
	OK		OK

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Vol+		Vol+
	Record		Rec / Rec Mode
	Down/CH-		Down
	Timeshift		Sleep / Timer
	1		1
	2		2
	3		3
	Recall		Back / Return
	4		4
	5		5
	6		6
	EPG		Guide / EPG / -/-
	7		7
	8		8
	9		9
	0		0



