

 
 



 


 






 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Picture		Picture / Format
	Sound		Sound / Title
	Aspect		Shift + Picture / Format
	Sleep		Sleep / Timer
	Subtitle		Subtitle / EQ
	CH. List		Smart / List
	EPG		Guide / EPG / -/--
	FAV		Fav / Marker / PC
	TV / Radio		TV/Radio /
	Up		Up
	Input		AV / Input / RDS
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Exit		Exit / Cancel / Clear
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back / Return
	Info		Info / Angle
	Vol +		Vol+
	Rec		Rec / Rec Mode
	Rec. List		Display / Media



