




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Fav / Marker / PC
	0		0
	Recall / Mouse		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Nicam		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	Source		AV / Input / RDS
	CH +		CH+ / Page+
	Vol +		Vol+
	Info		Info / Angle
	CH -		CH- / Page-
	Vol -		Vol-
	Home		Shift + Menu /
	Freeze		Shift + Pause / Step /
	Aspect		Shift + Picture / Format
	Settings		Setup / OPT /
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down






 




Originalfernbedienung Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	Play/Pause / Text		Text / Goto
	Play/Pause / Text		Pause / Step / Freeze
	Play/Pause / Text		Play / Slow
	Stop / Hold		Stop / Hold
	<< / Size		Zoom / Size
	<< / Size		<< / Tune-
	>> / Reveal		>> / Tune+
	l<< / Index		l<< / Preset-
	>>l / Subpage		>>l / Preset+
	Browser		Display / Media
	Subtitle		Subtitle / EQ
	Rec		Rec / Rec Mode
	R.List		Smart / List
	TV/Radio		TV/Radio /
	EPG		Guide / EPG / -/--
	Red		Red / Netflix / Search

Originalfernbedienung Ersatzfernbedienung

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

