 



 

 

 

 



 

 

 

 

 




 


 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info / Angle
	Recall		Back / Return
	Source		Setup / OPT /
	Auto Scan		Shift + Picture / Format
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	OK		OK
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Vol+		Vol+
	Vol-		Vol-
	CH+		CH+ / Page+
	CH-		CH- / Page-
	TV		TV/Radio /
	USB		Shift + 8
	HDMI		Shift + 0
	AV		AV / Input / RDS
	Play		Play / Slow





Originalfernbedienung Ersatzfernbedienung

	Pause		Pause / Step / Freeze
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	VGA		Zoom / Size
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	Home		Shift + Menu /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

