








 



 



 









 





 















 


 


 



 



 

 

 


Originalfernbedienung Ersatzfernbedienung

| | | | |
|-------------------------------------------------------------------------------------|-------|-------------------------------------------------------------------------------------|-------|
|  | Power |  | Power |
|  | Input |  | AV |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | Open |  | Eject |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Stop |  | Stop |
|  | 0 |  | 0 |
|  | -/-- |  | Guide |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---------------------------------------------------------------------------------------|----------|---------------------------------------------------------------------------------------|--------|
|  | Return |  | Back |
|  | Mute |  | Mute |
|  | Vol- |  | Vol - |
|  | Vol+ |  | Vol + |
|  | CH+ |  | Ch + |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Right |  | Right |
|  | Sys Menu |  | Menu |
|  | CH- |  | Ch - |
|  | Down |  | Down |
|  | Sys Exit |  | Exit |
|  | Picture |  | Format |
|  | Sound |  | Dual |
|  | Sleep |  | Sleep |
|  | Display |  | Info |



