









 

 

 

 

 



 



















 

 



























Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Lang		Audio / Lang I/II
	0		0
	TXT		Text / Goto
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	Home		Menu / Home
	P-		CH- / Page-
	Netflix		Shift + Red / Netflix /
	You Tube		Shift + Yellow / YouTube /
	Guide		Guide / EPG / -/-
	Up		Up
	i		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	prime video		Shift + Blue / Prime
	Rakuten Tv		TV/Radio /
	twitch		Picture / Format





Originalfernbedienung    Ersatzfernbedienung    Originalfernbedienung    Ersatzfernbedienung

	*1		Setup / OPT /		
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	<<		<< / Tune-		
	Pause		Pause / Step / Freeze		
	>>		>> / Tune+		
	Rec		Rec / Rec Mode		
	Play		Play / Slow		
	Stop		Stop / Hold		

