



 





 



 

 

 







 

 

 

 

 
 


Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	INFO		Info / Angle
	HDMI CONTROL		Smart / List
	SLEEP		Sleep / Timer
	SCREEN		Picture / Format
	SOURCE		AV / Input / RDS
	PRESETS		Setup / OPT /
	1		1
	2		2
	3		3
	ZOOM/RED/▲		Zoom / Size
	ZOOM/RED/▲		Shift + CH+ /
	ZOOM/RED/▲		Red / Netflix / Search
	4		4
	5		5
	6		6
	REPEAT/GREEN/▼		Shift + CH- /

Page-

Originalfernbedienung Ersatzfernbedienung

	REPEAT/GREEN/▼		Green / APP / Repeat
	7		7
	8		8
	9		9
	ROOT/YELLOW		Yellow / YouTube / Repeat
	RETURN		Back / Return
	0		0
	MENU		Menu / Home
	TITLE/BUE		Sound / Title
	TITLE/BUE		Blue / Prime Video / Random
	UP		Up
	LEFT		Left
	OK/SELECT		OK
	RIGHT		Right
	DOWN		Down
	P+		CH+ / Page+
	P-		CH- / Page-





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	V-		Vol-		PAUSE		Pause / Step / Freeze
	V+		Vol+		<<		<< / Tune-
	FAV		Fav / Marker / PC		>>		>> / Tune+
	LANG		Audio / Lang I/II		I<<		I<< / Preset-
	SUBTITLE		Subtitle / EQ		>>I		>>I / Preset+
	MUTE		Mute / Dimmer				
	SWAP/↔		Shift + Back / Return				
	EPG		Guide / EPG / -/--				
	[*] / [...]		D.Menu / Top				
	TEXT		Text / Goto				
	C		Exit / Cancel / Clear				
	DISPLAY		Display / Media				
	ANGLE		Shift + Info / Angle				
	SEARCH MODE		Shift + Red / Netflix /				
	REC		Rec / Rec Mode				
	STOP		Stop / Hold				
	PLAY		Play / Slow				

