



Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Picture		Picture / Format
	Sound		Sound / Title
	Zoom		Zoom / Size
	Subtitle		Subtitle / EQ
	EPG		Guide / EPG / -/--
	FAV		Fav / Marker / PC
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung    Ersatzfernbedienung

	CHN List		Smart / List
	0		0
	Return / Back		Back / Return
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	TV / Radio		TV/Radio /
	Vol +		Vol+
	Home		D.Menu / Top
	PR +		CH+ / Page+
	Vol -		Vol-
	PR -		CH- / Page-





**Originalfernbedienung Ersatzfernbedienung**

	Rec		Rec / Rec Mode
	Sleep		Sleep / Timer
	Info		Info / Angle
	Play/Pause / Index		Play / Slow
	Play/Pause / Index		Pause / Step / Freeze
	<< / Reveal		<< / Tune-
	>> / Mix		>> / Tune+
	Stop / Cancel		Stop / Hold
	I<< / Size		I<< / Preset-
	>>I / Sub-Page		>>I / Preset+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	I/II / Nicam		Audio / Lang I/II
	Text		Text / Goto
	Freeze / Hold		Shift + Stop / Hold

Hold

**Originalfernbedienung Ersatzfernbedienung**

	PVR List		Display / Media
	Quick		Setup / OPT /
	AD		Eject / Surround
	3D		Shift + 3

