



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	>>		>> / Tune+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	Info		Info / Angle
	EPG		Guide / EPG / -/-
	≡		Menu / Home
	Source		AV / Input / RDS
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Exit		Exit / Cancel / Clear
	Smart		Smart / List
	←		Back / Return
	Vol+		Vol+
	P+		CH+ / Page+



