







 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	TV		TV/R
	Vol +		Vol +
	Vol -		Vol -
	P +		Ch +
	P -		Ch -

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Exit		Exit
	Mute		Mute
	Source		AV
	Audio		Dual
	Info		Info
	Subtitle		Subt
	Size		Format
	Presets		Pre Ch





Originalfernbedienung Ersatzfernbedienung

	Message		Media
	TXT		Text
	<<		<<
	<<		I<<
	Stop		Stop
	Pause		Pause
	Play		Play
	>>		>>
	>>		>>I

Originalfernbedienung Ersatzfernbedienung

