



 
 
 

 
 
 

 

 

 

 
 
 

 

 
 


 

 





 

 

 

 
 
 
 

 


 


 
 

 




 










 

 
 











 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EPG		Guide
	PIP		Options
	Menu		Menu
	Text		Text
	End		Exit
	Info		Info
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	PR+		Ch +
	PR-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red/C.Set		Red
	Green/SV		Green
	Yellow/Zoom		Yellow
	Blue/Title		Blue
	Play		Play
	Stop		Stop
	Pause		Pause





Originalfernbedienung Ersatzfernbedienung

	Rec		Rec
	>>		>>
	<<		<<
	Home		Smart
	Radio		TV/R
	Rec Menu		Shift + Rec
	Marker		Pre Ch
	Time Shift		Format
	List		List

Originalfernbedienung Ersatzfernbedienung

