


 
 





**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	S.Mode		Sound / Title
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	P.Mode		Picture / Format
	Size		Zoom / Size
	Sleep		Sleep / Timer
	Tv/Radio		TV/Radio /

**Originalfernbedienung Ersatzfernbedienung**

	Index		D.Menu / Top
	Reveal		Setup / OPT /
	Text		Text / Goto
	AV/Source		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	i/Info		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Back		Back / Return
	Vol+		Vol+
	Rec List		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-





**Originalfernbedienung Ersatzfernbedienung**

	ATV		Display / Media
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Tv Guide		Guide / EPG / -/--
	0		0
	FAV		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat

**Originalfernbedienung Ersatzfernbedienung**

	Blue		Blue / Prime Video / Random
	Power/Display		Shift + Power
	Hold		Shift + Stop /
	Aspect		Shift + Picture / Format
	USB		Shift + 8

