









Originalfernbedienung Ersatzfernbedienung

 
 
 
 

 
 





 

 
 


 
 

	Power		Power
	Open / Close		Eject
	Language		Dual
	Angle		Format
	Subtitle		Subt
	Prog		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/10		0
	10+		Guide

Originalfernbedienung Ersatzfernbedienung

	<< Rev		<<
	>> Fwd		>>
	I<< Prev		I<<
	>>I Next		>>I
	Menu		Menu
	Title		List
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	Time		AV
	Setup		Options
	PBC		Shift + Guide
	Vol +		Vol +
	Vol -		Vol -
	Zoom		Shift + Eject





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Return		Back				
	A-B		D. Menu				
	Repeat		Text				
	P-Scan		Media				
	Step		Shift + Pause				
	Slow		Shift + Play				
	N/P		Red				
	L/R		Green				
	Mute		Mute				
	Display		Info				
	Play/Pause		Play				
	Stop		Stop				
	Play/Pause		Pause				
	Default		Smart				

