



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Vol-		Vol -
	Vol+		Vol +
	Setup		Options
	Search		TV/R
	Up		Up

 
Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Audio / RL		Dual
	OSD		Info
	Zoom		Eject
	Subtitle		Subt
	DVD / USB		Media
	Play / Pause		Play
	Stop		Stop
	Repeat		Text
	Angle		Format
	<<		<<
	>>		>>
	I<<		I<<





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
	>>

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

