



 

 






 








 









Originalfernbedienung Ersatzfernbedienung






 




	Standby		Power
	Monitor		Media
	Tv/DVD		TV/R
	T/C		Subt
	Play Mode		Shift + Play
	Rec Mode		Shift + Rec
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Disc		Menu

Originalfernbedienung Ersatzfernbedienung

	System		Smart
	Select		Info
	Timer		AV
	Tv Vol+		Vol +
	OK		Ok
	Tv Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Scissors/FSS		Options
	Return		Back
	Clear		Exit
	Play		Play
	I<<		I<<





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Stop	 Stop		
 >>	 >>		
 Audio	 Dual		
 Rec/OTR	 Rec		
 Pause	 Pause		

