 
 



 

 





 


 



 
 



 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Info		Info
	Setup		Options
	Mute		Mute
	Menu		Menu
	Music		Media
	Copy		3D
	Zoom		Eject
	TV System		TV/R
	Source		AV
	Vol+		Vol +
	Vol-		Vol -
	Return		Back
	Home		Smart
	Up		Up
	Down		Down
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Enter		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Timeshift		Sleep
	Goto		Pre Ch
	Rec		Rec
	Play		Play
	Stop		Stop





Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	I>/Slow		Format
	A-B		D. Menu
	Timer		Shift + AV
	Rec List		List
	Subtitle		Subt
	Repeat		Shift + Text
	Audio		Dual
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	TTX		Text

Originalfernbedienung Ersatzfernbedienung

	EPG		Guide

