



 













 




 




 





Originalfernbedienung Ersatzfernbedienung

|   |           |   |                   |
|---|-----------|---|-------------------|
|    | Power     |    | Power             |
|    | Tv System |    | TV/Radio /        |
|    | Mute      |    | Mute / Dimmer     |
|    | Rec       |    | Rec / Rec Mode    |
|    | Browser   |    | Smart / List      |
|    | Timer     |    | Sleep / Timer     |
|    | Copy      |    | D.Menu / Top      |
|    | Guide     |    | Guide / EPG / -/- |
|    | Vol-      |    | Vol-              |
|    | Up        |    | Up                |
|   | Vol+      |   | Vol+              |
|  | Left      |  | Left              |
|  | Enter     |  | Shift + OK        |
|  | Right     |  | Right             |
|  | Return    |  | Back / Return     |
|  | Down      |  | Down              |
|  | Setup     |  | Setup / OPT /     |

Originalfernbedienung Ersatzfernbedienung

|   |            |   |                             |
|---|------------|---|-----------------------------|
|    | 1          |    | 1                           |
|    | 2          |    | 2                           |
|    | 3          |    | 3                           |
|    | 4          |    | 4                           |
|    | 5          |    | 5                           |
|    | 6          |    | 6                           |
|    | 7          |    | 7                           |
|    | 8          |    | 8                           |
|    | 9          |    | 9                           |
|    | 0          |    | 0                           |
|   | Goto       |   | Text / Goto                 |
|  | Slow       |  | Shift + Play /              |
|  | Option     |  | Shift + Setup / OPT / Tools |
|  | Play       |  | Play / Slow                 |
|  | Stop       |  | Stop / Hold                 |
|  | Pause/Step |  | Pause / Step / Freeze       |
|  | I<</Prev   |  | I<< / Preset-               |



Tools

