

 


 





 











 



 
 
 
 
 







 


















 



 


 

 




Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Login / Lock		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[[]]		Info
	Menu		Menu
	PTZ		Media
	Exit		Exit
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	+		Vol +
	-		Vol -
	Record		Rec
	Stop		Stop
	Extra		Options
	<<		<<
	Play		Play
	>>		>>
	>>		>>
	Stop / Step		Pause
	Green / Audio		Green
	Green / Audio		Dual
	Red / Mute		Red



