
 










 





 



 



 


 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Red / TV/SAT		Red
	Red / TV/SAT		AV
	Green / TV/Radio		Green
	Green / TV/Radio		TV/R
	Yellow / Zoom		Yellow
	Yellow / Zoom		Eject
	Blue / List		Blue
	Blue / List		List
	Audio		Dual
	M/P		Smart
	Timer		Shift + AV
	Timer		Sleep
	Info		Info
	1		1
	2		2
	3		3

Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Fav		Pre Ch
	Mute		Mute
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +



