





 

 












 













Originalfernbedienung    Ersatzfernbedienung

	POWER		Power
	MUTE		Mute / Dimmer
	1		1
	2		2
	3		3
	P. MODE		Picture / Format
	4		4
	5		5
	6		6
	S. MODE		Sound / Title
	7		7
	8		8
	9		9
	SLEEP		Sleep / Timer
	ASPECT		Shift + Picture / Format
	0		0
	BACK		Back / Return

Originalfernbedienung    Ersatzfernbedienung

	NICAM / A2		Audio / Lang I/II
	INPUT		AV / Input / RDS
	UP		Up
	DISPLAY		Display / Media
	LEFT		Left
	OK		OK
	RIGHT		Right
	MENU		Menu / Home
	DOWN		Down
	EXIT		Exit / Cancel / Clear
	RED		Red / Netflix / Search
	GREEN		Green / APP / Repeat
	YELLOW		Yellow / YouTube / Repeat
	BLUE		Blue / Prime Video / Random
	TEXT		Text / Goto
	PLAY / PAUSE		Play / Slow
	PLAY / PAUSE		Pause / Step / Freeze





Originalfernbedienung Ersatzfernbedienung

	SIZE		Zoom / Size
	STOP		Stop / Hold
	HOLD		Shift + Stop /
	REW		<< / Tune-
	FWD		>> / Tune+
	INDEX		Info / Angle
	REVEAL		Setup / OPT /
	SKIP PREV.		<< / Preset-
	SUBPAGE		Eject / Surround
	SKIP NEXT		>>  / Preset+
	REPEAT		Shift + Green / APP /
	SUBTITLE		Subtitle / EQ
	AUTO		Smart / List
	LANG.		Shift + Audio / Lang I/II
	FAV		Fav / Marker / PC
	T. SHIFT		Shift + Pause / Step /
	REC		Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung

	REC. MENU		D.Menu / Top
	TV / RADIO		TV/Radio /
	VOL-		Vol-
	VOL+		Vol+
	CH-		CH- / Page-
	CH+		CH+ / Page+

