



Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Eject		Eject / Surround
	Source		AV / Input / RDS
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/10		0











 


 

 

 
 

 












Originalfernbedienung Ersatzfernbedienung

	Recall/+10		Back / Return
	FAV/Program		Fav / Marker / PC
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Display		Display / Media
	D.Setup		Setup / OPT /
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Vol-		Vol-
	Vol+		Vol+
	CH-		CH- / Page-
	CH+		CH+ / Page+
	Red/Goto		Red / Netflix / Search
	Green/A-B		Green / APP / Repeat

 

 







Originalfernbedienung Ersatzfernbedienung

	Yellow/Angle		Yellow / YouTube / Repeat
	Blue/Repeat		Blue / Prime Video / Random
	Play/Hold		Play / Slow
	Pause		Pause / Step / Freeze
	Stop/Reveal		Stop / Hold
	Size/Aspect		Zoom / Size
	Subtitle		Subtitle / EQ
	<<		<< / Tune-
	Text		Text / Goto
	>>/Subpage		>> / Tune+
	SCR/Title		Shift + Sound / Title
	Slow/EPG		Guide / EPG / -/--
	I<</Index		I<< / Preset-
	>>I/Mix		>>I / Preset+
	D.Menu		D.Menu / Top
	I/II/Audio		Audio / Lang I/II
	Media		Shift + Display / Media

Originalfernbedienung Ersatzfernbedienung

	Rec		Rec / Rec Mode
	Timeshift		Shift + Sleep / Timer
	Tv/Radio		TV/Radio /

