







 














 


 





 





Originalfernbedienung Ersatzfernbedienung

PP	PP		Back / Return
	Power		Power
1	1		1
2	2		2
3	3		3
4	4		4
5	5		5
6	6		6
7	7		7
8	8		8
9	9		9
P<P	P<P		Fav / Marker / PC
0	0		0
--	--		Guide / EPG / --
	Menu [M]		Menu / Home
	Info [i]		Info / Angle
	I-II		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Left		Left
	Up		Up
	Right		Right
	OK		OK
	Down		Down
	V -		Vol-
	V +		Vol+
	P -		CH- / Page-
	P +		CH+ / Page+
	Red / Sound		Red / Netflix / Search
	Red / Sound		Sound / Title
	Green / Picture		Green / APP / Repeat
	Green / Picture		Picture / Format
	Yellow / Feature		Yellow / YouTube / Repeat
	Blue / Install		Blue / Prime Video / Random
	Text		Text / Goto





Originalfernbedienung Ersatzfernbedienung

[EQ]	[≡o]	TIMER SLEEP	Sleep / Timer
[EB]	Hold	HOLD	Stop / Hold
[EX]	[≡X]	CLEAR EXIT CANCEL	Exit / Cancel / Clear
[M]	Mix / PIP Swap	LIST SMART	Smart / List
[PIP]	PIP / Size	SIZE ZOOM	Zoom / Size
[PIF]	PIP Down / [≡?]	PRESET-	I<< / Preset-
[PIA]	PIP Up / Index	PRESET+	>>I / Preset+
[TV]	[TV]	PROGRAM TV/RADIO	TV/Radio /
[AV]	[AV]	RDS AV INPUT	AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung

