
 
 


 

 




 




 
 



 





 

 
 



 









 

 



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off	 Power	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Slow Down	 Ch -	Return	 Back
Slow Up	 Ch +	Menu Down	 Down
Auto/Track	 Smart	Progr.	 Sleep
Stop	 Stop	Next	 >>
Title	 List	Top Menu	 D. Menu
Pause	 Pause	Prev.	  <<
Subt.	 Subt	Volume+	 Vol +
Rep/A-B	 TV/R	Volume-	 Vol -
Repeat/1/All	 Text	1	 1
DVD/TV	 AV	2	 2
Zoom	 Shift + Eject	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	Record	 Rec
Menu Left	 Left	Rewind	 <<



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Play		Digest	 +  Shift + Guide
Video		Open/Close	 Eject
F.Forward			
Angle			
6			
7			
8			
R/L			
Remain			
9			
+10			
0			
Info	 +  Shift + Info		
Audio			
C/CH			
Echo+	 +  Shift + Ch +		
Echo-	 +  Shift + Ch -		

