
 
 
 
 
 




 
 
 







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|----------------|
|  | Standby |  | Power |
|  | Display |  | Shift + Info |
|  | Nicam / Eject |  | Eject |
|  | Mute |  | Mute |
|  | P.Mode |  | Shift + Format |
|  | S.Mode |  | Shift + Dual |
|  | Sleep |  | Sleep |
|  | Aspect |  | Format |
|  | Vol - |  | Vol - |
|  | Vol + |  | Vol + |
|  | CH - |  | Ch - |
|  | CH + |  | Ch + |
|  | LCD-Menu |  | Menu |
|  | DVD-Setup |  | Options |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | Ok |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------------|---|-------|
|  | Right |  | Right |
|  | Down |  | Down |
|  | Source |  | AV |
|  | Exit |  | Exit |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Recall |  | Back |
|  | Text / Audio |  | Text |
|  | Hold / A-B / Rec List |  | Smart |

 

 






Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------|---|---------------|
|  | Rec |  | Rec |
|  | Time Shift |  | Media |
|  | Red / Repeat |  | Red |
|  | Red / Repeat |  | Shift + Text |
|  | Green / Zoom |  | Green |
|  | Green / Zoom |  | Shift + Eject |
|  | Yellow / Angle |  | Yellow |
|  | Blue / Goto |  | Blue |
|  | Index / I<< |  | I<< |
|  | Size / Stop |  | Stop |
|  | Rev. / Play/Pause |  | Play |
|  | Rev. / Play/Pause |  | Pause |
|  | Sub.P / >>I |  | >>I |
|  | TV/Radio / << |  | << |
|  | TV/Radio / << |  | TV/R |
|  | Lang / Menu |  | Dual |
|  | Lang / Menu |  | D. Menu |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|---------------|
|  | I> Step |  | Shift + Pause |
|  | >> |  | >> |
|  | Subtitle |  | Subt |
|  | EPG / Program |  | Guide |
|  | FAV |  | Pre Ch |
|  | EPG / Program |  | Shift + Sleep |
|  | Info / Title |  | Info |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

