


 
 

 



 
 
 
 
 
 
 
 
 
 
 

 

 

 

 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	P.Mode		3D
	S.Mode		Shift + Dual
	P.Size		Format
	Audio		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Sleep		Sleep


 


 

 
 
 
 
 

 

 

 
 

 
 
 
 





 

 
 


Originalfernbedienung Ersatzfernbedienung

	Recall		Back
	DTV/Radio		TV/R
	Guide		Guide
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	FAV.CH		Pre Ch
	Info		Info
	Source		AV
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok









Originalfernbedienung Ersatzfernbedienung

	TS		Media
	Vol+		Vol +
	Vol-		Vol -
	[≡ ]		List
	CH+		Ch +
	CH-		Ch -
	Text		Text
	[≡?]		Options
	Subtitle		Subt
	[≡◆]		Eject
	[≡+]		Smart
	Play		Play
	Pause		Pause
	Rec		Rec
	<<		<<
	>>		>>
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung

	<<		<<
	>>		>>

