



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Time		AV
	Prog		Sleep
	Fade		TV/R
	Shuffle		Subt
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Highlight		Guide
	Repeat		Text

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	Play		Play
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Pause		Pause
	>>		>>
	CD Text		Smart
	Scroll		3D
	Repeat A-B		Shift + Text

