























 











 
 

 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sound Mode		Dual
	AMS		Guide
	A-B		TV/R
	Random		Media
	Program		Sleep
	Cancel		Exit
	Scroll / Recall		Back
	Display		Info
	Text		Text
	Time		AV
	Folder Up		Up
	Folder Down		Down
	Input Up		Ch +
	Input Down		Ch -
	Vol +		Vol +
	Vol -		Vol -

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute
	Repeat		Shift + Text
	Q.Replay		Smart
	Open / Close		Eject
	Pause		Pause
	Play		Play
	Stop		Stop
	>>		>>
	<<		<<
	>>		>>
	<<		<<
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Enter		Ok

Originalfernbedienung Ersatzfernbedienung

